

# andrewJames

## 4 Day Automatic Pet Feeder



Please read the instruction manual carefully and keep it for future reference.

# Contents page

Control panel	Page 3
Features	Page 3
Appliance components illustration	Page 4
Disassemble	Page 5
Assembling the appliance	Page 6
Filling the bowl with food	Page 7
Getting started	Page 8
Setting the current clock time	Page 8
Setting the feeding time	Page 9
Review and start the feeding timer	Page 10
Display mode	Page 10
Recorded voice message to be played at feeding time	Page 10
Battery replacement	Page 10
Notes & FaQ	Page 11
UK & EU Guarantee	Page 12
Contact details	Page 13


## Control Panel

- **MODE** - switches between clock or feeding time display. Also increases clock time during clock / feeding time set mode.
- **SET** – enters settings mode. Also confirms the time you enter and advances to next setting.
- **START NOW** – starts the feeding timer immediately.
- **START TOMORROW**- starts the feeding timer the next day.
- **REC** – records your personal voice message.
- **PLAY** – plays back your recorded voice message.
- **ON SWITCH** – turns the feeder on / off. For when the feeder will not be used for an extended period of time. Turning this switch off will RESET all time and feeding settings.

## Features

- 24 hour clock display.
- 6 second personal voice message recorder.
- Personal Voice message calls your pet when its feeding time.
- Food Bowl rotates according to your set time.
- The 4 Feeding times can be set for any time of day or night.
- C size alkaline batteries (4pc's required) not required.
- Red LED indicates low batteries.
- Extra compartment top for ice-pack or water.

Appliance components illustration

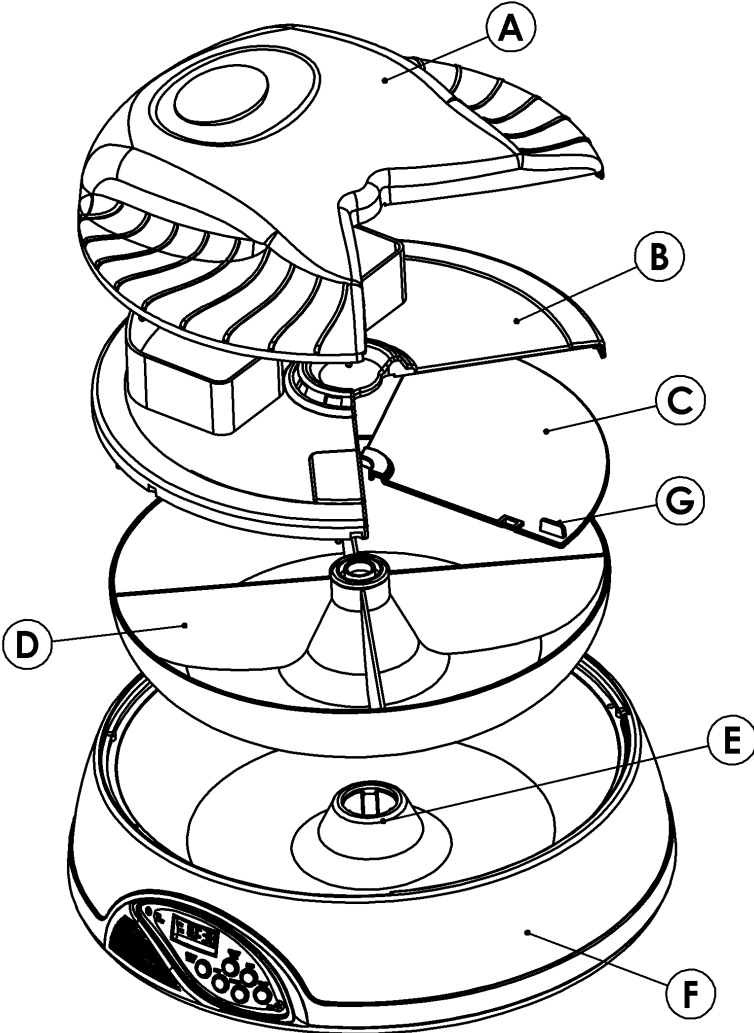

A. Bowl cover	D. Food bowl
B. Inner bowl cover	E. Hob
C. Slide cover	F. Feeder base

## Disassemble

1. Remove the bowl cover (A) by forcefully lifting the lid from underneath.
2. Remove the inner bowl (B).
3. Remove the slide cover (C).

Optional: Remove the feedings trays from the feeding base (D) the appliance can be used with or without the trays and firmly push down.



## Re-assembling the appliance

1. Fit the food bowl (D) so that it locks with the Hub (E) located in the feeder base (F).
2. Place the Inner feeding trays into the food bowl (D) this is optional.
3. Fit the slide cover (C) onto the top of the food bowl (D).
4. Fit the inner bowl (B) onto the feeder so that it locks with the slide cover (C).
5. Secure the Bowl cover (A) onto the appliance by lining up the fittings.



## Filling the bowl with food

1. Please disassemble the appliance first.
2. Fill the food bowl (D) with the required amount of food (the appliance can be used either with or without the food trays).
3. Place the slide cover (C) onto the appliance so that it fits the grooves.
4. Attach the Inner bowl (B) so that it fits with the slide cover. You can now fill the ice compartment if required (C) .
5. Fit the bowl cover (A) accordingly.



## Getting started

1. Carefully turn the pet feeder upside down. Remove both battery doors by squeezing the two tabs and gently pull each door away.
2. Keep the ON switch set to **OFF**. Insert four C size alkaline batteries into the battery tray. DO NOT use old or cheap carbon batteries.
3. Close the battery doors, rotate the feeder right-side up and switch **ON** The feeder will cycle one time until "**12:00**" is on the LCD display.

**Note:** Your pet feeder makes the food available in this sequence: Tray 1, Tray 2, Tray 3 then Tray 4. When only one feed is required only fill Tray 1. For two feeds Tray 1 and 2. Continue the sequence on for further feeds.


## Setting the current Clock time

1. **Press and hold** the **SET** key for (2 seconds) to enter Clock SET mode. The hour number will now begin to blink.
2. Press the **MODE** key to increase the hour. Once you have set the hour, press the **SET** key to confirm the hour. The minute number will now blink.
3. To change the minute number, press the **MODE** key to increase the minute. Once you have set the minute, press the **SET** key to confirm the minute. Both the hour and minute numbers will now blink.
4. If needed, Press the **MODE** key to change between 12 or 24 hour time.
5. Press the **SET** key to confirm your current time setting and the numbers will stop blinking.



## Setting the Feeding Time

1. After setting the clock time, press the **MODE** key one time. (1 1) will show on the display. This is the feeding-time display mode.
2. Now **press and hold** the **SET** key for (2 seconds) to enter the Feeding time SET mode. Feeding will start from the first feeding number & time. The 1<sup>st</sup> digit shows the feeding number (Food Tray 1).
3. The hour digit will now blink (2<sup>nd</sup> and 3<sup>rd</sup> digit). Press the **MODE** key to increase the time, then press the **SET** key to confirm the set time.
4. After confirming the feeding time you just set, the next feeding number & time will show on the display (1<sup>st</sup> digit will change to the next feeding number, e.g. 2 or 3 or 4 and back to 1). **To change the feeding time, repeat step 3.**
5. Repeat step 3 until all 4 feeding times are set. The display will change back to clock display mode when all 4 feeds have been set.

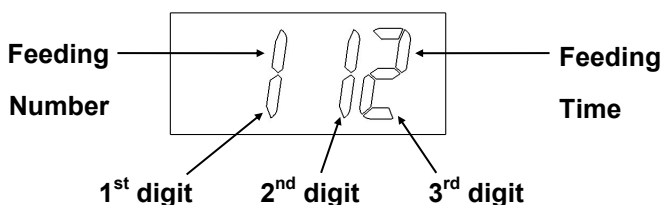

### Program examples:

- Feed once a day at 13:00hr (24hrs display) and feed for 4 days
- Feed time 1 & 2 & 3 & 4 = 13:00hr
- Feed twice a day at 10:00 and 20:00 and feed for two days
- Feed time 1 = 10, feed time 2 = 20, feed time 3 = 10 and feed time 4 = 20
- Feed four times a day at 6:00, 11:00, 16:00 and 21:00
- Feed time 1 = 06, feed time 2 = 11, feed time 3 = 16 and feed time 4 = 20

Please note that the feeder will start from the closest time for example if its 13:00 and your feeder has been set to feed at 8:00, 12:00, 15:00 and 18:00 it will start from 13:00.

## **Review and Start the feeding timer**

1. Use the MODE key to cycle through the clock and your set feeding times (clock - then 1st feed time→2nd feed time→3rd feed time→ 4th feed time→ back to clock...) The sequence will repeat.
2. Press the START NOW key to start the feeding timer immediately. The bowl will rotate to the pre-set starting position (Tray 4) and your recorded message will play once. The BELL icon will now be seen in the LCD display.
3. Alternatively press the START TOMORROW key and the feeding timer will start at 0:00-Midnight. The bowl will rotate to the pre-set starting position (Tray 4) and your recorded message will play once. The BELL and Zz icon will now be visible in the LCD display.

## **Display Mode (to check feeding times you have set)**

Use the MODE key to cycle through clock and feeding settings (clock - then 1st feed time→2nd feed time→3rd feed time→ 4th feed time→ back to clock...) The sequence will repeat.

When the pet feeder runs out of food, just refill it. You do not need to go through the timer process again.

## **Record Voice Message to be played at feeding times**

1. Press and hold the REC key, the Red LED will turn on.
2. Speak your message. You have up to 20 seconds.
3. When finished release the REC key.
4. Play back recorded Voice Message.  
Press the PLAY key.

Your recorded message will now play.

At each Feeding your recorded message will play back 3 times.

## **Battery Replacement**

Change all batteries when the Red LED (Low battery indicator) flashes. Use only new Alkaline batteries.

## Notes and FAQ'S:

1. When the bowl is rotating both the clock setting and mode setting are not allowed.
2. Under clock display mode the colon icon (:) will flash. The colon icon (:) is turned **Off** when in feeding timer mode.
3. A **PM** icon will be displayed in the afternoon under 12-hour clock mode and turned off in the AM. The **PM** icon will not be displayed under 24 hour clock mode.
4. In feeding timer mode, three numbers will show up, the first number is the feeding number (1,2,3,or 4) and last two digits indicate the feeding time in hours.
5. When the feeding timer starts, the BELL icon will turn on. Under feeding-timer display mode a solid BELL icon means the feeding time has already passed. A flashing BELL icon means the feeding time has not been reached. This lets the user know how many feedings are left for feeding.
6. If the time for the next feeding is set earlier than the present feeding time, the feeding will start the next day.
7. If the **Mode** key is pressed and held for more than 2 seconds the number will rapidly increase automatically until you release the key. When number reaches its maximum, the number will fall back to the minimum value and start increasing again.
8. If the feeding timer has already begun, pressing the **START** key will reset the timer and begin again from the 1<sup>st</sup> feeding-time set.
9. If **START TOMORROW** key is pressed, both the **BELL** and **Zz** icon will be **ON**. The **Zz** icon will turn **OFF** at 0:00 midnight to indicate the timer has started.
10. **START TOMORROW** is used should you want to set your feeder up today and have it start tomorrow. This is good for when you have programmed feeding times that have yet to pass so you can prepare in advance for a possible trip or just being away the next day and not wanting the feeder to run the day you programmed it.

## **UK and EU Guarantee**

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic not commercial use. Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights. Returned products must be cleaned and returned to us in as close to delivery condition as possible. If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer. If you wish to return your item for a full refund, you have the right to do so within the first 7 days.

For our returns policy please go to [www.andrewjamesworldwide.com](http://www.andrewjamesworldwide.com)

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.